

 


Default Settings Password: **admin**
 Default Administration Password: **adminpwd**
 Default Wi-Fi Mode IP Address: **192.168.59.254**

NOTE: Steps 1 - 4 are one-time setup. Step 5 is for Users.

1 Connect KLIK Boks to Display

a) Use either VGA or HDMI to connect the KLIK Boks to your display or projector.

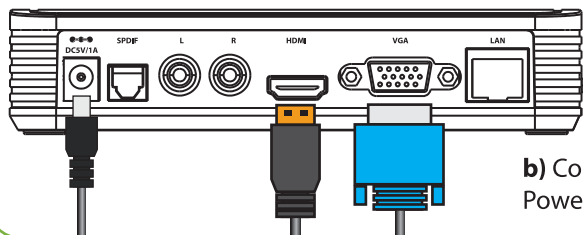

NOTE: Only one video output will be active at a time. Use either HDMI or VGA but not both.

b) Connect Power Supply and press Power button once to turn On.

2 Install KLIK Software


Use the supplied USB flash drive or download from www.klikboks.com



Copy the software to your computer and double-click the Startup icon. Follow the prompts to install the software and reboot when prompted.

3 Add KLIK to A Wired Network

Use an Ethernet Cable to connect to your existing router

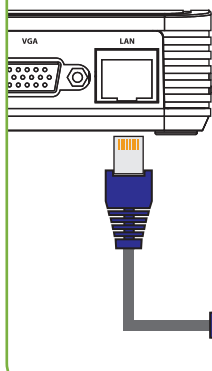

NOTE: When connecting with Ethernet, skip to step 5; otherwise, to connect with Wi-Fi continue to step 4.



4 Add KLIK to a Wireless Network


Connect to KLIK using Wi-Fi

a) Power on the KLIK Boks and confirm that the Standby screen is shown on the presentation display:



Confirm that the KLIK Boks is in Wi-Fi mode and note the Device ID.

b) Open your computer's Wireless Network connection manager and select the KLIK Boks by name. Press Connect. No password is required.

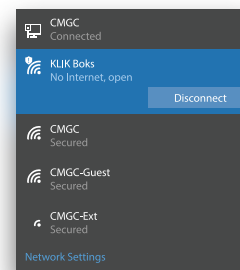

Windows

 


Mac

NOTE: Connect to KLIK as if you are connecting to a Wi-Fi network.


4 Add KLIK to a Wireless Network

c) Open a browser window and navigate to the KLIK Boks IP address shown in the Standby screen (default is 192.168.59.254).

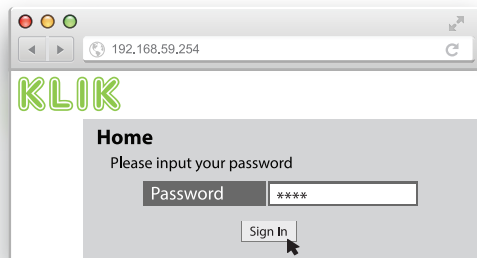


Enter the password (Default is admin) and click Sign In.

d) Select Wireless Settings from the menu on the left, then click on the Wi-Fi Connection tab.

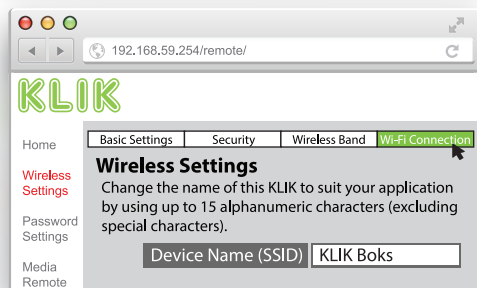


NOTE: If you change the Device Name at this stage, you must reconnect using the new name as in section 4b in order to continue setup.

 e) Scan for available Wi-Fi and select the preferred Wireless Access Point (AP). Enter password and click Apply. KLIK will restart and connect to the Wi-Fi selected.

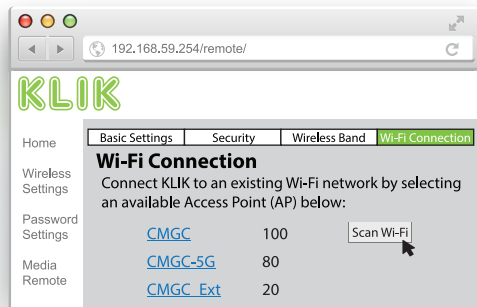


f) Enter the password for your selected Wi-Fi AP and click Submit.

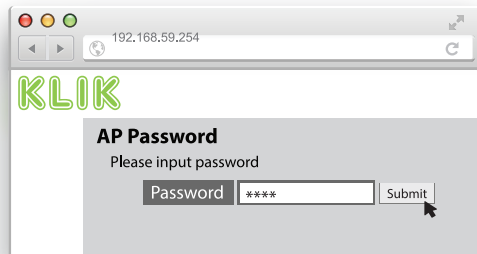


4 Add KLIK to a Wireless Network


g) The KLIK Boks will restart and display that it is in DMR mode along with the name of the wireless network to which it is connected. Close the browser window and connect to the same wireless network as the KLIK Boks.

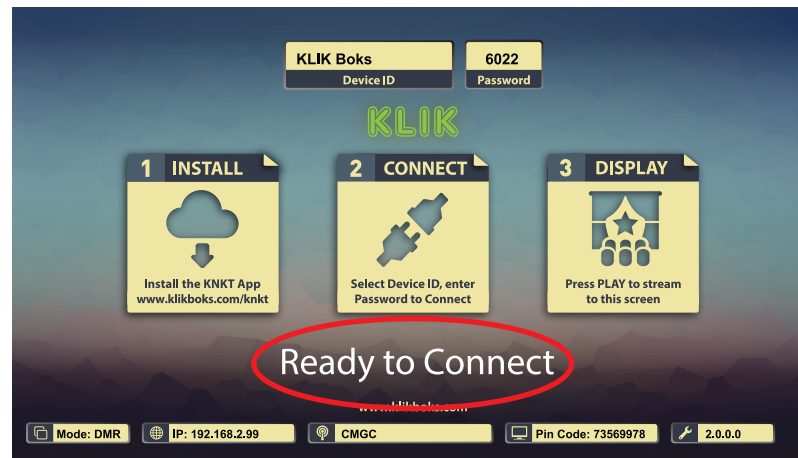

5 Launch KLIK Software and Start Streaming

a) Locate the program icon and start the software. 

b) When the Connection Manager appears, select the KLIK Boks by name, enter the displayed Password and press Connect.

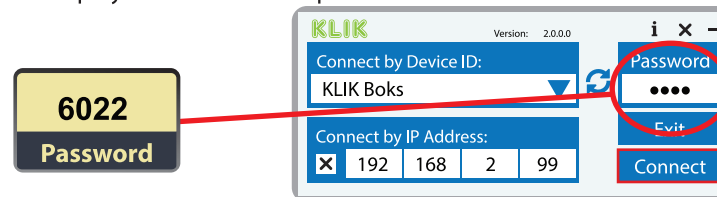

NOTE: Use Connect by IP Address on networks that block Name Discovery.

c) Once connected you will see the KLIK Player. To mirror your screen simply press Play!



NOTE: For more setup and operating information refer to the Integration Manual.