


4

Add KLIK to A Wireless Network

7) The KLIK Boks will restart and display that it is in now connected to the Wi-Fi network shown. Users are directed to connect to the same wireless network in order to stream content to the KLIK.

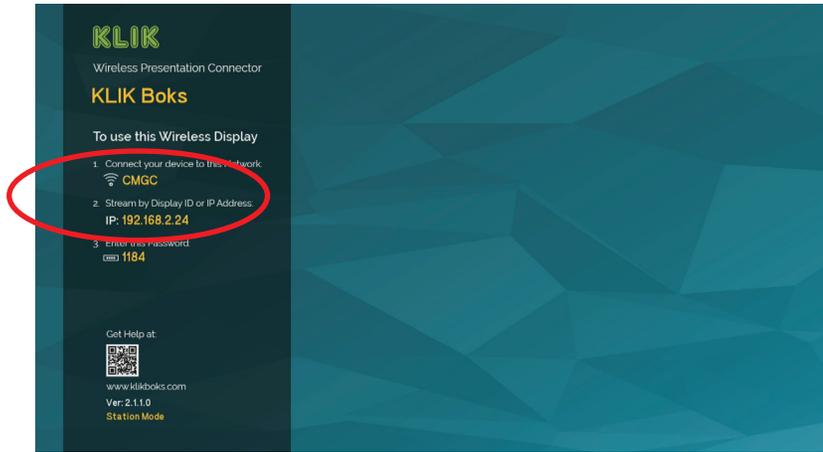


5

Launch KLIK Software and Start Streaming

- 1) Locate the program icon and start the software.
- 2) When the Connection Manager appears, select the KLIK Boks by name, enter the displayed Password and press Connect.

3. Enter this Password: 1184

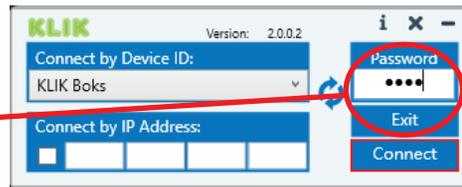

NOTE: If the KLIK Boks name does not appear in the Connection Manager, check that Network Discovery is enabled. Alternately, enter the IP Address displayed on the KLIK Standby Screen to connect.

- 3) Once connected you will see the KLIK Player. To mirror your screen simply press Play!



NOTE: For more setup and operating information refer to the User Manual

KLIK Boks Quick Start Guide




Default Settings Password: **admin**
 Default Administration Password: **adminpwd**
 Default Wi-Fi Mode IP Address: **192.168.59.254**

NOTE: Steps 1 - 4 are one-time setup. Step 5 is for Users.

1

Connect KLIK Boks to Display

- 1) Use either VGA or HDMI to connect the KLIK Boks to your display or projector.

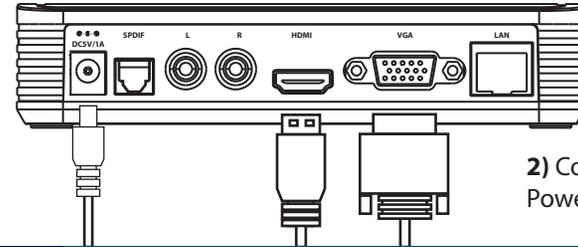


NOTE: Only one video output will be active at a time. Use either HDMI or VGA but not both.

- 2) Connect Power Supply and press Power button once to turn On.

2

Add KLIK to a Wired Network

Use an Ethernet Cable to connect to your existing router

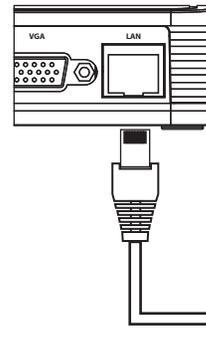

NOTE: To connect with Wi-Fi follow the instructions in the Section 4, "Add KLIK to a Wireless Network".



3

Install KLIK Software

Download & Install from www.klikboks.com or the App Store for your device.




NOTE: KLIK may also be used without software installation. Windows, Mac, iOS and Android users can connect using their native streaming utilities.

4

Add KLIK to A Wireless Network

First, Connect to KLIK using Wi-Fi


1) Power on the KLIK Boks and confirm that the Standby screen is shown on the presentation display:

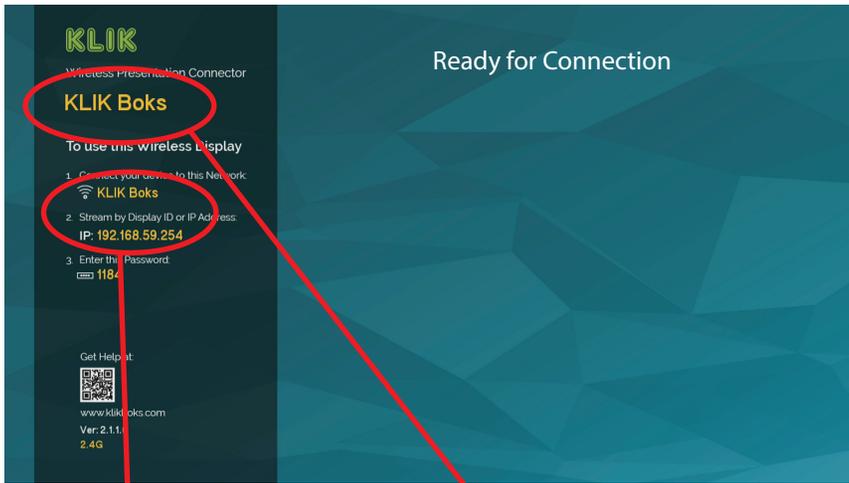

This is the Wi-Fi signal name being broadcast by KLIK. Connect to this SSID as shown below.

This is the Device ID, the default name of the KLIK Boks. It can be changed during Setup.

2) Open your computer's Wireless Network connection manager and select the KLIK Boks by name. Press Connect. No password is required.

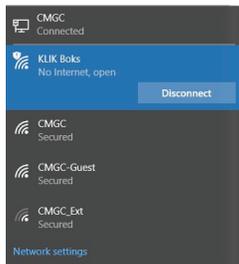

Windows




Mac

NOTE: Connect to KLIK as if you are connecting to a Wi-Fi network.


4

Add KLIK to A Wireless Network

3) Open a browser window and navigate to the KLIK Boks IP address shown in the Standby screen (default is 192.168.59.254). Enter the password (Default is admin) and click Sign In.:

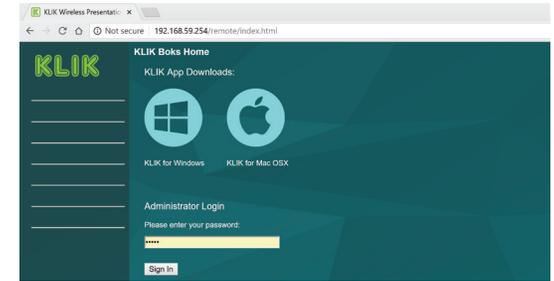

4) Select Wireless Settings from the menu on the left, then click on the Wi-Fi Connection tab to navigate to the Wi-Fi pairing screen.

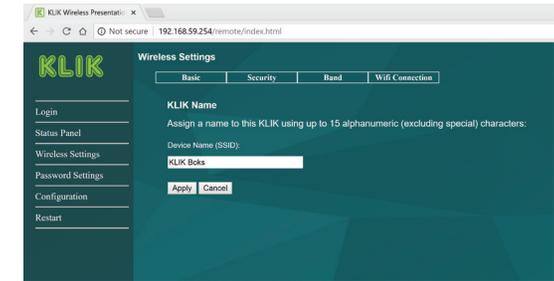

NOTE: If you change the Device Name at this stage, you must reconnect using the new name as in section 4b in order to continue setup.

5) Click on the "Scan for Wi-Fi" button to search for the wireless access point that KLIK will be connected with. This could take up to 2 minutes to complete. Select the preferred wireless Access Point (AP) from the list.



6) Enter the password for your selected Wi-Fi Access Point and click Submit. The KLIK Boks will terminate broadcasting its SSID and will connect to the Wi-Fi network. Any connected devices will be disconnected.

